

WOCA Deep Cleaner A & B

- for the deep cleaning of outdoor wood



Preparing today for tomorrow



- For the deep cleaning of wood garden furniture of any type of wood
- Removes oil and dirt from deep down inside the wood
- Concentrated, dilute with water
- 2-step-cleaning with Deep Cleaner A & B

Product info

Container: 1 litre

Consumption: 5-20 m²/litre depending on the wood type, its condition and age.



Application area

For the cleaning and lightening of wood garden furniture. To be diluted with water depending on the type of wood.

Result

Deep Cleaner A penetrates the wood and removes remainders of oil, dirt and particles from deep down inside the wood. This ensures a comprehensive cleaning of the wood until deep down inside the pores of the wood.

Deep Cleaner B neutralises Deep Cleaner A and prepares the wood for the oil treatment. Penetrates in to the upper pore system of the wood and lightens the wood.

Application


Apply on soaking wet wood with a stiff brush, nylon brush or pad. Apply Deep Cleaner B right after finishing the treatment with Deep Cleaner A. Afterwards rinse thoroughly with water.

After care

Use Garden Furniture Oil.

How to do...

- WOCA Deep Cleaner A & B:
deep cleaning of outdoor wood

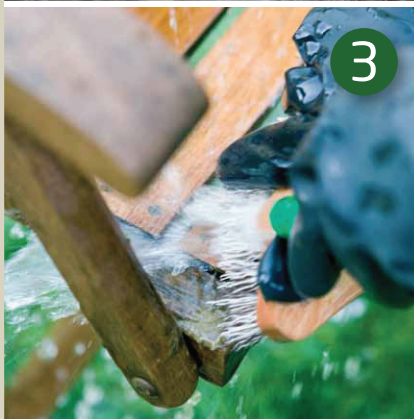

Tools

Hard stiff, acid proof nylon brush, plastic bucket and if possible a garden hose for the rinsing.

Wear suitable gloves and eye/face protection.

Clean tools with water and soap.

Please notice!

Wear suitable gloves and eye/face protection.

Important:

Deep Cleaner A must be followed by Deep Cleaner B.

The cleaning should not take place on surfaces of wood and stone, and there should be access to sewerage.

Deep Cleaner A & B is a system for cleaning of all garden furniture in wood with the exception of oak. Heavy dirt, green growth and weather-beaten oil residues are effectively removed. Deep Cleaner A dissolves the dirt. Deep Cleaner B neutralises Deep Cleaner A and lightens up the wood. Always use the two products in combination. Be aware of the risk of corrosion of e.g. furniture fittings.

① Soak the wood with plenty of water. Use a garden hose if possible.

② Apply Deep Cleaner A with a brush and scrub until the dirt is removed. Dependant on extent of dirt the cleaner is used either concentrated or mixed with water 1:3 for hardwood and mixed with water 1:3 to 1:5 for softwood.

③ Apply Deep Cleaner B with a brush while the wood is still wet and scrub the wood wet-in-wet until the wood appears light again. Dependant on extent of dirt the cleaner is used either concentrated or mixed with water 1:3 for hardwood and mixed with water 1:3 to 1:5 for softwood.

④ Hose down with plenty of water. Leave the wood to dry completely. Remove rising fibres with sandpaper.